



★ Reviews



11th Anniversary

Water-Wash Resin 2.0

€25,99 ~~€35,99~~ Save €10,00

€13,6/kg for bulk sale

★★★★☆ 26 reviews



Special Price & Select Your Color



€25,99 ~~€35,99~~

€13,6/kg for bulk sale

Gray (#7E93A7) ▾

1KG ▾

Add to cart

Size: 1KG

1KG

Pick Your Shade, Save on More

- 

4KG Pack 33% OFF

€35,99

€17,41 / KG
- 

6KG Pack 39% OFF

€35,99

€15,85 / KG
- 

10KG Pack 44% OFF

€35,99

€14,55 / KG

HOT SALE
- 

20KG Pack 48% OFF

€35,99

€13,51 / KG
- 

50KG Pack 48% OFF

€35,99

€13,51 / KG
- 

100KG Pack 48% OFF

€35,99

€13,51 / KG

★ Reviews

1

^

▼

Add to cart

rayful

More payment options

 Worry-Free Delivery® available with [seel](#) ⓘ



Estimated Shipping Time

Ships in 24 hours



€25,99

€35,99

€13,6/kg for bulk sale

▼

▼

Free Express Shipping

Free 3D Printer System

30-Day After-Sales Guarantee

1-Year Warranty For 3D Printers



Water-Washable & Budget-Friendly

Engineered with a hydrophilic formulation, this solution redefines post-processing. Efficiently remove residual resin with water only—no isopropyl alcohol (IPA) required. Enjoy a safer, lower-cost, and truly eco-friendly workflow that streamlines cleanup without compromising quality.



€25,99 ~~€35,99~~

€13,6/kg for bulk sale





Pre-wash



Post-wash



©Loot Studios

Elongation at Break

16.62%

★ Reviews

Water Wash
Resin 2.0



Water Wash
Resin +



Resilient Against Breaking

16.62% Elongation at Break ensures post-curing toughness, delivering durable models resistant to fractures and cracks.



€25,99 ~~€35,99~~

€13,6/kg for bulk sale





Low-Shrinkage Rate & High-Precision

Achieve unparalleled surface detailing with 0.15mm precision. This level of control fulfills the extreme demands of intricate miniature models, allowing you to print complex features with flawless accuracy, every time.

★ Reviews

Resistant to Cracking over Long Periods

Featuring an optimized hydrophilic formula that significantly reduces water absorption and resists cracking, your models maintain their vivid colors and structural integrity over long-term display.

The experimental results show that the models printed with Anycubic Water-Wash Resin+ can be stored for 3 years in natural environment without cracks after curing

(Restoration time under laboratory salt spray test) 72h

Time	Restoration time (h)
15day	1h
1years	24h
2years	48h
3years	72h

Restoration time comparison between models under laboratory salt spray test and natural environment

*Data coming from Anycubic Product Lab.

Water-Wash Resin2.0



€25,99

€35,99

€13,6/kg for bulk sale



Resin settings

Exposure time: 2.5s

Lifting speed: 1mm/s

Print time: 10H19M

Lifting height: 6mm

UV power (%) : 80%



Resin settings

Exposure time: 1.5s

Lifting speed: 1mm/s

Print time: 9H40M

Lifting height: 6mm

UV power (%) : 80%

Consistent Results & High-Efficiency

Anycubic Water-Washable Resin 2.0 maintains low viscosity even at 15°C–20°C, ensuring smooth flow and consistent build plate adhesion. This guarantees print stability and superior success rates—even in unheated or low-temperature environments.

★ Reviews



€25,99 ~~€35,99~~

€13,6/kg for bulk sale





Minimal Odor & Eco-Friendly

A fresh and more pleasant printing experience.

★ Reviews




€25,99 ~~€35,99~~

€13,6/kg for bulk sale

Applications



Model Display

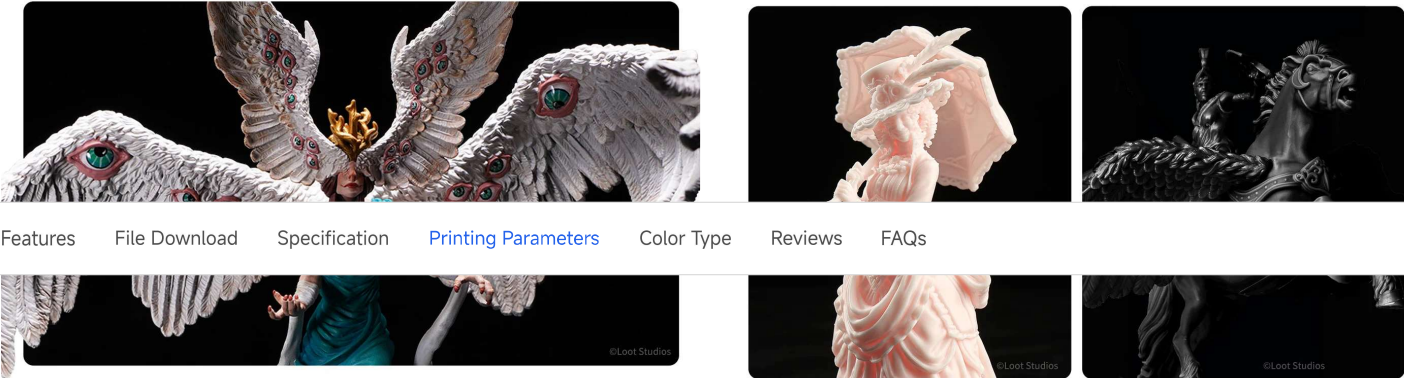

★ Reviews

File Download



€25,99 ~~€35,99~~

€13,6/kg for bulk sale

Dropdown arrows

Preparations

^

Pre-print preparation	Print environment
Shake well before use	20-40 °C

Print Parameters

^

First layer exposure duration	Normal exposure duration
25-40 s	2-2.5 s
Print temperature	
20-50 °C	

Physical Properties

^

Material	Wavelength
Hydrophilic group-modified light-curing resin	365-405 nm
Viscosity	Density
190-230/mPa·s(25°C)	1.07-1.09/g/cm³

★ Reviews

Mechanical Properties

^

Hardness	Tensile Strength
82-85 HD	38-43 MPa
Elongation at Break	Bending Modulus
16-22%	48-60 MPa
Bending Strength	Young's Modulus
2300-3000 MPa	1100-1300 MPa
Izod Impact Strength	Volume Shrinkage Rate
133 J/m	2.5-5.5%

Post-processing-1

^

Machine duration

UV Wavelength



€25,99

€35,99

€13,6/kg for bulk sale



Post-processing-2

Cleaning	Washing duration
Water	Medium ≥5 min
UV Wavelength	Curing Temperature
405 nm	18-30 °C
UV Intensity	Curing time
25000-30000 uW/cm²	3 mins

Disposal

1. Do not drain wastewater into sewers to avoid contaminating groundwater.
2. After cleaning, let the wastewater sit in the tank for a period of time. Place it under sunlight to allow the resin in the tank to fully cure. Once cured, dispose of it as solid plastic waste for recycling to prevent environmental pollution.

Recommended Printing Parameters

★ Reviews

Printer Model	Layer Thickness	Exposure Time	Light-Off Time	Bottom Exposure Time	Bottom Layers	Anti-Aliasing L
Photon P1	0.05 mm	2 s	2 s	30 s	1	4
Photon Mono M7	0.05 mm	2.5 s	1 s	35 s	4	1
Photon Mono M7 Pro	0.05 mm	2 s	0.5 s	25 s	4	1
Photon Mono M7 Max	0.05 mm	2 s	0.5 s	30 s	5	1
Photon Mono M5	0.05 mm	2.8 s	0.5 s	25 s	5	1
Photon Mono M5s	0.05 mm	2.8 s	0.5 s	25 s	5	1
Photon Mono M5s Pro	0.05 mm	3.6 s	0.5 s	30 s	5	1
Photon Mono 4	0.05 mm	2.4 s	1 s	30 s	5	1
Photon Mono 4K	0.05 mm	2 s	0.5 s	40 s	6	1



€25,99

€35,99

€13,6/kg for bulk sale

▼

▼

Photon Mono X6Ks	0.05 mm	2.5 s	0.5 s	20 s	5	1
ANYCUBIC Photon M3 Max	0.05 mm	3 s	2 s	35 s	6	1
ANYCUBIC Photon M3 Premium	0.05 mm	2.5 s	0.5 s	25 s	4	1

Color Type

Color	Hex Color Value	Color Display
Black	#212721	
White	#EFF0F1	
Grey	#7E93A7	
HD Grey	#768692	
Purple	#825DC7	
Cherry Blossom Pink	#F5DADF	
Clear	/	
Translucent Blue	#077CAB	
Translucent Yellow	#D5BF39	
Translucent Red	#D22630	
Translucent Green	#009A17	
Smoky Black	#688197	

★ Reviews

Instructions for Use

1. Before use:
- (1) Shake the liquid resin before use.
 - (2) Clean the resin vat and the build plate.
 - (3) Ensure the tank bottom remains highly transparent.
 - (4) Confirm the release film is undamaged.
 - (5) Verify correct print parameter settings.
 - (6) Recommended printing environment: 20-35 °C (to prevent temperature-related failures)



€25,99 ~~€35,99~~

€13,6/kg for bulk sale



4. Post-processing steps:

- (1) Remove models from the build plate using the scraper; remove the supports.
- (2) Clean models in the Anycubic Wash & Cure machine for ~10 minutes (use ≥95% alcohol or cleaner).
- (3) Dry models: Air-dry, blow-dry, or use a drying chamber (prevents water absorption/cracking).
- (4) Secondary curing: Cure models for 3-5 minutes.
- (5) Resin recycling: Filter through a 100-mesh sieve.

Precautions

- 1. Store at room temperature away from light.
- 2. Recommended use temperature: >20°C (low temperatures reduce success rate; high temperatures accelerate pigment settling).
- 3. If pigment settles: Stir with a plastic scraper or shake the resin bottle.
- 4. Resin cures under sunlight. Print in dim, ventilated areas or cover the printer.
- 5. Remove models promptly after washing to avoid property degradation.
- 6. Always wear nitrile gloves and goggles (avoid skin/eye contact).
- 7. Waste disposal: Cure resin completely before discarding as solid waste.
- 8. Maintain ventilation; keep liquid away from pregnant women, children, and pets.

Customer Reviews

★★★★☆ 4.73 out of 5
Based on 26 reviews

★★★★★	22
★★★★☆	3
★★★☆☆	0
★★☆☆☆	0
★☆☆☆☆	1

★ Reviews

Customer photos & videos



€25,99 €35,99

€13,6/kg for bulk sale



★★★★★

08/31/2026

👤

Anonymous

Verified

Sk

Water-Wash Resin 2.0

Low odor, good results.

★★★★★

08/30/2026

👤

P.d.C.

Verified

BE

Perfect to do fast and reliable test prints

Perfect to do fast and reliable test prints, easy in use and washing of with water

★★★★★

08/15/

👤

Anonymous

Verified

NL

Works great

Works great, the level of detail is awesome and the fact that you can w it with water is a big plus

★★★★★

07/01/2026

👤

F.

Verified

RC

For dental is not ok this model transparent

For dental is not ok this model transparent ...

★★★★★

06/30/2026

👤

D.

Verified

PT

Great resin

Great resin , but didnt receive my package

★★★★★

06/20/

👤

R.

Verified

Sk

Water wash is my

Water wash is my favorite

★★★★★

05/02/2026

👤

V.

Verified

BC

Excellent for printing dental models

Excellent for printing dental models.

★★★★★

05/01/2026

👤

G.

Verified

Gf

Water wash 2.0

The product is really amazing the odor is minimum and the washing is really simple and fast the resin dissolve really well

★★★★★

03/29/

👤

Anonymous

Verified

SE

good for

good for miniatures

★★★★★

03/18/2026

👤

Anonymous

Verified

SE

Reliable resin

Have been using about 50kg by now of water-wasahable resin 2.0 HD grey on my mars 4 ultras. Works great. Wish more and different colors options.

FAQs

What models are suitable for printing with Water-Wash Resin 2.0?

▼



€25,99

€35,99

€13,6/kg

for bulk sale

▼

▼



- [Anniv. Sale](#)[New Arrivals](#)[3D Printers](#)[MATERIALS](#)
- [Accessories](#)[Help Center](#)[Makeronline](#)[Explore](#)

- Where can I download the model for free?
- What should I do if my model keeps failing to print?
- What should I do if I receive resin that is leaking?

Anycubic is a manufacturer of high-performance desktop 3D printers and accessories. Combining precision engineering with user-friendly designs, Anycubic enables enthusiasts, engineers, and artists to turn their ideas into reality.

Products

Company

Support

★ Reviews

European Union (English / €
EUR)

© 2026, ANYCUBIC-EU . All Rights Reserved.

[Shipping Policy](#) [Refund Policy](#) [Privacy Policy](#) [Terms of Service](#)



€25,99 ~~€35,99~~

€13,6/kg for bulk sale

